

GECKO® SATELLITE SRM 2020

OWNER'S MANUAL




www.geckomusic.net



GECKO® SAFETY INSTRUCTIONS & SYMBOLS GUIDE

For your own safety and to avoid invalidation of the warranty, all text marked with these symbols should be read carefully.

SYMBOLS:

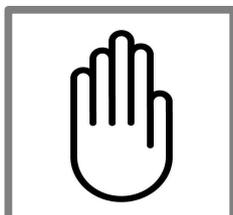

NOTES

Contain important information and useful tips on the operation of your equipment.



WARNING

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



CAUTIONS

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. Please read the manual carefully.



HEADPHONES SAFETY WARNING

Contain important information and useful tips on headphones outputs and monitoring levels.



SAFETY INSTRUCTIONS:

- To reduce the risk of electrical shock, do not remove covers. No user serviceable parts inside. Please refer servicing to qualified personnel.
- To reduce the risk of electrical shock or fire, do not expose the equipment to rain or moisture.
- Do not impose unnecessary stress on your equipment (i.e. placing heavy objects on it, overscrewing its mounting etc).
- Read and keep the instruction manuals in a safe place for future references.
- Do not attempt to clean the equipment with chemical solvents as this may damage the finish. Clean only with dry cloth.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not defeat the purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the grounding prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug the apparatus during lightning storms or when it is not in use for a long period of time.

- Use only attachments / accessories specified by the manufacturer.
- Always shut down power supply when not in use to save energy and for prolonged lifespan.
- Exposure to extremely high noise levels may cause permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a period of time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the permissible noise level exposures shown in the following chart. According to OSHA, any exposure in excess of these permissible limits could result in some hearing loss. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels use hearing protectors while the equipment is in operation. Ear plugs or protectors in the ear canals or over the ears must be worn when operating the equipment in order to prevent permanent hearing loss if exposure is in excess of the limits set forth here:

Duration/Day (Hours)	dB, Sound Pressure Level (SPL)	Descriptions
	Below 90 dB	Safe zone
8.00	90	Hearing damage
6.00	92	
4.00	95	
3.00	97	
2.00	100	Serious hearing damage
1.50	102	
1.00	105	
0.50	110	
0.25 or less	115	Human pain threshold

GECKO MUSIC GROUP

No. 59, 59-1, 61, 61-1, 63, 63-1, Jalan PE 3, Taman Paya Emas,
 Paya Rumput, 76450 Melaka, Malaysia.

Mobile: +6012.204 2175

Email: info@geckomusic.net • Website: www.geckomusic.net

FOREWORD

Dear Friends,

Thank you very much for purchasing quality products by **GECKO MUSIC GROUP**. I am indeed very delighted that we have journeyed this far, setting new standards in the audio and music industry while touching and changing lives along the way!

At **GECKO MUSIC GROUP** we focus on developing nothing but the best professional audio equipment and premium grade musical instruments you ever need! It has been our philosophy all this while that good sound reproductions can be achieved at a fraction of a premium. Our engineering team is constantly doing research and development to meet this objective. We thank God that by HIS grace, we have succeeded in developing the revolutionary C.R.I.S.T.A.L.® Audiophile technology that is changing the way how sound is being encoded, reproduced and managed!

On behalf of **GECKO MUSIC GROUP**, I would like to pledge our continuing commitment to uphold our traditions in serving music and audio communities around the world with more value-added highest possible quality GECKO® professional audio equipment and premium grade musical instruments!

Once again, thank you very much for your support.


Yours truly,

A handwritten signature in black ink, consisting of a large, stylized 'D' followed by a series of loops and a final flourish ending in a small dot.

Daniel Foo
Founder / Chairman
GECKO MUSIC GROUP

TABLE OF CONTENTS

INTRODUCTION	1
MICROPHONE ELEMENTS	2
CONNECTING AND DISCONNECTING THE MICROPHONE	3
MICROPHONE USE	3
CLEANING	4
SPECIFICATIONS	5
WARRANTY	6

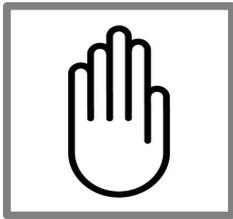

NOTES: Congratulations on purchasing the GECKO® SATELLITE SRM 2020 audiophile condenser microphone! We recommend that you take a moment and read through the manual as it provides information that will assist you in using your unit to its fullest potential.

INTRODUCTION

The GECKO® SATELLITE SRM 2020 audiophile condenser microphone adopts advanced SMT precision control circuit with pressure gradient transducer cartridge and a large vapor-deposited gold diaphragm to achieve high sensitivity, extended frequency response, no crossover distortion and low self-noise.

A built-in switchable 10dB PAD, Low Frequency Attenuation, and C.R.I.S.T.A.L.® Audiophile circuitry enables the GECKO® SATELLITE SRM 2020 capable of handling very high sound pressure levels (SPL) with ease and reducing the pickup of low-frequency ambient noise (i.e. on stage shows), while capturing and reproducing very accurate sound.


The zinc diecast housing is spray painted and oven baked to maintain its solid sheen and protection. The stocked gold-plated XLR male connector matches XLR female inputs on all kinds of professional audio equipment.

The GECKO® SATELLITE SRM 2020 is highly recommended for broadcasting, television studios, recording studios (particularly for engineers recording voices and instruments in hi-fidelity for audiophile CDs), stage performances, and for many other professional audio applications that require precision audio capturing.


Summary of features:

- * transformerless circuitry and large gold-deposited diaphragm for accurate sound reproduction;
- * high sensitivity and low self-noise;
- * suitable for high SPL environments;
- * low output impedance for long distance connection and high EMI resistance;
- * wide and smooth frequency response range.

MICROPHONE ELEMENTS

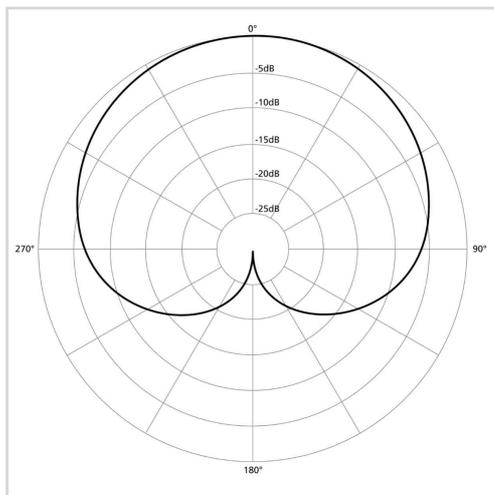

POLAR PATTERN

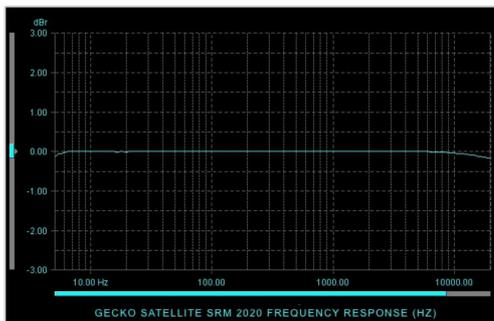

FREQUENCY RESPONSE



1. METAL MESH GRILLE

To protect the microphone diaphragm from possible damage caused by external factors.

2. DIECAST METAL BODY

This diecast metal body is designed to withstand on-the-road abuses for years of trouble-free use.

3. SENSITIVITY ATTENUATION SWITCH

The SENSITIVITY ATTENUATION switch when set at [0] position means no attenuation. At [-10dB] position, the microphone sensitivity is fixed on -10dB level. This shortens the pickup distance, eliminates ambient noise, and ensures distortion-free sound capturing. This function is usually used for high SPL and large dynamic pickup occasions (i.e. the pickup of low frequencies instruments of symphony orchestra).

4. LOW FREQUENCY ATTENUATION SWITCH

Rumbling or wind noise may cause distortion at very low frequencies. The microphone's LOW FREQUENCY ATTENUATION switch when set at [—] position further reduces low-end frequencies distortion. The filter slope is more than 10dB/octave at 100Hz. The bass cut also minimizes the proximity effect that may arise when doing close-in miking from less than 6 inches. At [—] position, there is no attenuation.

5. INTEGRAL XLR MALE CONNECTOR

The GECKO® SATELLITE SRM 2020 has a balanced gold-plated XLR (male) output.

CONNECTING AND DISCONNECTING THE MICROPHONE

1. Insert the XLR (female) connector on one end of the microphone cable into the microphone. If necessary, rotate the connector to align the key on the connector and the groove in the microphone. Push the connector into the microphone until it clicks.
2. Make sure you are connecting to a balanced audio device, be sure to use balanced configuration on the XLR type connectors. Pin 1 = Ground (Shield), Pin 2 = Positive (Hot), Pin 3 = Negative (Cold).
3. To unplug the connector from the microphone, press the tab before pulling the connector out from the microphone.

MICROPHONE USE

1. The supplied shock mount has a standard 3/8" thread insert so you can mount the microphone on almost every commercial stand or suspension with a 3/8" thread. To fix the shock mount on a stand with 5/8" thread, remove the thread insert and screw the shock mount directly on the stand. Open the shock mount by pressing the two circular levers, then insert the GECKO® SATELLITE SRM 2020 from above.
2. Set the volume control of your sound reinforcement system to minimum position, connect the GECKO® SATELLITE SRM 2020 to an external phantom power supply (DC +48V) unit if your mixing board does not come with one and turn on the phantom switch.
3. Start off referencing by setting the mixing console channel's gain/trim all the way down and its EQ set flat, then bring the channel fader and main stereo output faders up to 0dB position, after that slowly bring up the gain/trim until you get the desired level. Ensure that your sound reinforcement system's amplification level is set accordingly.
4. To minimize the chance of feedback (a loud howling or squealing noise), ensure that the head of the microphone is not covered by hand or positioned close to the loudspeaker.
5. For best result, be sure to use a pop filter or the supplied windscreen.
6. Due to the high sensitivity of the cartridge, do not drop or apply strong shock to it.
7. To maintain the sensitivity and quality of sound reproduction, avoid exposure to moisture and extreme temperatures.
8. The GECKO® SATELLITE SRM 2020 can be used for instrument and vocal miking, i.e. lead/solo vocals, backing vocals/choir, speeches, strings, woodwinds, brasses, percussions, and also backline amplifiers miking.



CAUTIONS : Do not connect the GECKO® SATELLITE SRM 2020 to any power supply other than a phantom power source (input with phantom power or external IEC standard phantom power supply) with a floating connector, using a balanced cable (i.e. GECKO® TRUTH T3AL audiophile signal cable) with studio grade connectors to IEC 268-12 (i.e. GECKO® OLYMPIAN audiophile connectors) only. This is the only way to ensure safe and reliable operation.

CLEANING

MICROPHONE

Use a soft cloth moistened with water to clean the surface of the microphone body.

WINDSCREEN

Wash the foam windscreen in soap suds. Use only a completely dried post-washed windscreen.

SPECIFICATIONS

Type:

Large Vapor-Deposited Gold Diaphragm

Transducer Principle:

True Audiophile Condenser

Polar Pattern:

Cardioid

Frequency Response:

18Hz ~ 22kHz

Sensitivity:

-37dB ± 2dB (0dB=1V/Pa at 1kHz)

Output Impedance:

100Ω ± 30% (at 1kHz)

Load Impedance:

≥ 1000Ω

Equivalent Noise Level:

≤ 15dB A (IEC 581-5)

Max. Input SPL:

130dB (THD ≤ 1% at 1kHz), 140dB (with 10dB PAD)

Low Frequency Attenuation:

10dB/octave at 100Hz

Power Requirements:

+48V DC Phantom Power

Output Connector:

Integral Gold-Plated XLR Male

Included Accessories:

GECKO® SATELLITE SH 2020 Suspension Shock Mount, GECKO® SATELLITE WS 2020 Windscreen, GECKO® SATELLITE Microphone Case

Physical Properties:

Finish: Diecast Zinc Body

Color: Metallic Grey (Body), Black (Steel Mesh Grille)

Net Weight: 750g

Dimension: (L) 160mm x (∅) 55mm

Specifications subject to change without prior notice. Manufactured under ISO9000 certified management system.

GECKO® TERMS OF WARRANTY

WARRANTY:

GECKO MUSIC GROUP warrants its GECKO® products for a period of three (3) years from the original date of purchase, in accordance to the warranty regulations described below.

WHAT IS COVERED:

During the applicable warranty period, GECKO MUSIC GROUP warrants the product against defects in materials and workmanship and against malfunctions. GECKO MUSIC GROUP will remedy all such defects and malfunctions without charge for parts or labour if the warranty applies. In the case that other parts are used which constitutes an improvement, GECKO MUSIC GROUP may, at its discretion, charge the customer for the additional cost of these parts. Final determination of warranty coverage lies solely with GECKO MUSIC GROUP.

WHAT IS NOT COVERED:

1. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country where the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in material or workmanship.
2. Normal wear and tear, in particular, of faders, cross faders, potentiometers, keys/buttons, valves, guitar/bass strings, machine heads, pick-up covers, vinyl covers, illuminants, and similar parts are not covered by this warranty.
3. Improper handling, neglect or failure to operate the unit in compliance with the instructions given in the user or service manuals.
4. Connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
5. Damages/defects caused by force of nature or any other condition that is beyond the control of GECKO MUSIC GROUP.
6. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void the warranty.
7. Modification or removal of serial numbers.

OBTAINING WARRANTY SERVICE:

To return a GECKO® product for warranty service, first fill out the **Online Technical Report** on **www.geckomusic.net** and submit for an authorization/service number. Write the authorization/service number so that it is prominently displayed on the outside of the shipping carton. Any products received without an authorization/service number that is clearly visible upon arrival at the factory will be refused. Enclose proof of the original delivery date or a copy of the original sales receipt/invoice. Enclose a description of the suspected defect or malfunction and the condition, if any, which caused the problem. Return the product to GECKO MUSIC GROUP.

WARRANTY SHIPPING:

You are responsible for prepaying shipping costs F.O.B. GECKO MUSIC GROUP, Melaka, Malaysia. Shipped product(s) must be properly packaged. Use original shipping cartons and packing materials where possible. GECKO MUSIC GROUP is not responsible for damages resulting from inadequate and or improper packing. Products received with damages due to improper packaging will be deemed out of warranty.

Products which do not meet the terms of this warranty will be repaired exclusively at the buyer's expense. GECKO MUSIC GROUP will inform the buyer of such circumstance. If the buyer fails to submit a written repair order within six (6) weeks after notification, GECKO MUSIC GROUP will return the unit C.O.D. with a separate invoice for freight and packing. Such costs will also be invoiced separately when the buyer has sent in a written repair order.

WARRANTY RIGHTS:

This warranty is exclusive and extended to the original buyer and is not transferable to anyone who may subsequently purchase this product. No other person (apart from authorized GECKO® Stores) shall be entitled to give any warranty promise on behalf of GECKO MUSIC GROUP.